



LINKLIKE

C-FLOW

USER MANUAL

Contents

C-FLOW

 
Precautions	01
Wearing Instructions	03
Pairing Tutorial	04
Check Battery Status	04
Volume Sync (Important)	05
Dual-Device Connection	06
Operation Instructions	08
Charging Case Function Description	10
Status Description	11
Important Notes	12
Battery Warning	12
Hearing Safety	13
Charging & FCC Compliance	14
Manufacturer & Support	15

Quick start and safety information


Precautions

EN


1. Before first use, remove the protective films covering the earbuds' charging contacts.

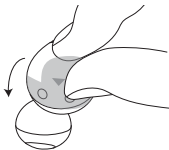


2. After exercise, please wipe the charging contacts of the earbuds. Do not place earbuds with sweat residue into the charging case, as this may affect performance. If you experience frequent disconnections or failure to connect, gently clean the contacts with a cotton swab or tissue.

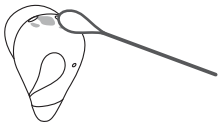

3. For first activation, remove both earbuds from the charging case, then return them to the case. Close the lid and reopen it when ready to pair.

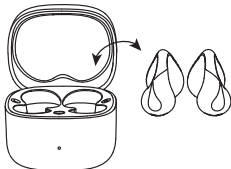

4. For battery care, we recommend fully charging before first use. Earbuds: about 1 hour. Case (wired): about 1.5 hours.

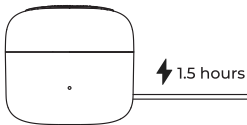

Wearing Instructions

Front




Audio Output Port

Back



Touch Control Panel


1. Place the earbud with the sound outlet facing into the ear canal.
2. Adjust the angle of the earbud so that the sound outlet is vertically aligned with the ear canal for optimal fit and sound quality.
3. Wearing the earbuds incorrectly or swapping left and right earbuds may affect call quality and audio performance.
4. If the earbuds are exposed to water or sweat, please dry them promptly to avoid affecting functionality.

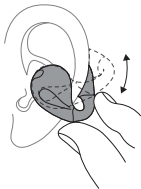

Pairing Tutorial

1. Open the charging case; the earbuds will power on automatically.
2. On your phone, go to Settings > Bluetooth.
3. Find LINKLIKE C-Flow in the Bluetooth device list and tap to connect.
4. Enable call and media permissions, and turn on volume synchronization (Important).

Note: If your phone cannot find the device, please turn Bluetooth off and then turn it back on.

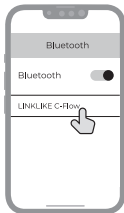

Check Battery Status

Depending on the operating system, you can check the battery status on the left swipe screen or in the top notification bar of your phone.

Volume Sync (Important)


Volume sync settings vary by phone. On iOS, no manual setup is usually needed. On compatible Android phones, look for volume sync in Bluetooth or headphone settings. If available, turn it on.




Pro tip: For optimal volume control and enhanced audio quality, activate volume sync before using your earbuds.

Dual-Device Connection

Method 1: Open the charging case and turn on Bluetooth on Devices A and B. When LINKLIKE C-Flow appears on both devices, tap it on each device within 15 seconds to connect quickly.

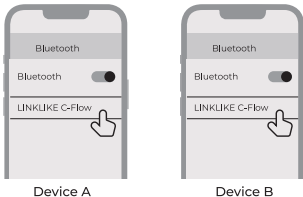


Method 2: With the earbuds in the open case, connect to Device A. Tap the charging case touch key three times to enter manual pairing mode, then connect Device B.

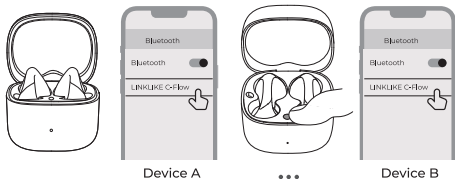

Note: Bluetooth performance may vary depending on device and operating system. If reconnection fails, try toggling Bluetooth off and on, or reset the earbuds to factory settings.

Operation Instructions

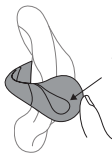

Left Earbud
Touch Controls
(Single-finger tap)

Left Earbud Controls

Music mode	●	Single tap: Play/Pause
	●●	Double tap: Previous track
	▬	Long press: Volume down
	●●●	Triple tap: Enter/Exit game mode
Call mode	●●	Double tap: Answer call
	▬	Long press: Hang up/Reject call
Normal mode (non-music, non-call mode)	▬	Hold 3 s: Power on Hold 6 s: Power off
Disable touch control	Tap the earbud touch control 5 times. Touch control re-enables after returning to the case.	


Right Earbud Touch Controls (Single-finger tap)



Right Earbud Controls


Music mode	●	Single tap: Play/Pause
	●●	Double tap: Next track
	▬	Long press: Volume up
	●●●	Triple tap: Enter/Exit voice assistant
Call mode	●●	Double tap: Answer call
	▬	Long press: Hang up/Reject call
Normal mode (non-music, non-call mode)	▬	Hold 3 s: Power on Hold 6 s: Power off
Disable touch control	Tap the earbud touch control 5 times. Touch control re-enables after returning to the case.	

 Charging Case Function Description

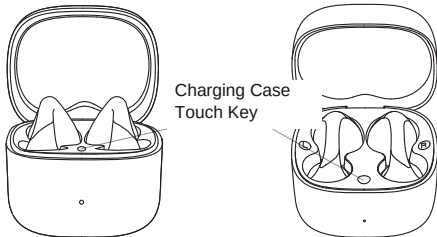

Function	Operation	Light Status
Factory reset	Tap the touch key 5 times in a row	White and red lights flash alternately for 3s
Active pairing mode	Tap the touch key 3 times in a row	White light slowly flashes
Check charging case battery	Open or close the charging case lid	Indicator shows the corresponding battery level color

 Status Description

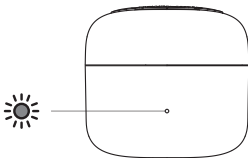

Function Description	Light Status
Earbuds pairing mode	White light breathing flash
Earbuds pairing successful	White light stays on for 3s
Earbuds reconnection mode	White light flashes rapidly
Case open/close	Battery level displayed for 3s
Charging case battery level (display when case opened)	White: 80%~100% Green: 50%~80% Orange: 20%~50% Red: 0%~20%
Fully charged	White light on for 10s
NTC thermal protection	Red light flashes for 10s
Earbuds detection (in/out)	Battery indicator light flashes twice quickly

Important Notes

1. Do not use corrosive cleaners to clean this product.
2. Avoid using the product in high-temperature or humid environments. Never expose to heat sources, open flames, or fire to prevent explosion.
3. This product contains no user-serviceable parts. Do not disassemble or modify.
4. Do not charge below 0°C to prevent battery damage.
5. Avoid use during thunderstorms as it may cause malfunction and electric shock risks.
6. Maintain moderate volume levels. Prolonged loud volumes may cause hearing damage.
7. Refrain from use in situations requiring full attention (e.g., traffic or skilled work).
8. Use only certified chargers meeting standard requirements.
9. For optimal performance, use USB-C adapters compliant with national standards.
10. Keep accessories and packaging components away from children and pets to prevent accidents/choking hazards.

Battery Warning

1. For long-term storage, we recommend running down the earbuds' battery through normal use and then fully recharging about once every three months. Use and store within the recommended temperature range.

2. Do not disassemble, impact, crush, or expose to fire. Discontinue use if severe swelling occurs. Avoid high-temperature environments. If battery life significantly shortens, cease use and consult professionals.
3. Improper battery replacement may cause explosion. Use only identical/ equivalent battery types. Replacement must be performed by qualified technicians.
4. Battery packs or battery arrays must not be exposed to excessive heat sources, including sunlight or open flames.
5. For products containing built-in batteries: When disposing, separate from household waste. Deliver to designated e-waste collection points for proper recycling. Never discard casually.



Hearing Safety

- To avoid hearing damage, do not listen at high volume for long periods.
- Do not set the volume too high to ensure you can hear surrounding sounds.
- Do not use earbuds while driving.
- Use with caution or pause use in potentially dangerous situations.



This product contains magnets that may interfere with pacemakers, implantable cardioverter defibrillators (ICDs), and other medical implants. Keep the earbuds and charging case at least 10 cm (3.94 in) from such devices. Consult your physician or device manufacturer if you have questions.

Charging & FCC Compliance



The power delivered by the charger must be between 0.005 W and 5 W to achieve the maximum charging speed.



Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

FCC Compliance (continued)

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Manufacturer & Support

Shenzhen Linklike Technology Co., Ltd.
C707, Building C, Zhantao Technology Tower,
Intersection of Minzhi Avenue and Industrial East Road,
Xinniu Community, Minzhi Street, Longhua District, Shenzhen, China
Website: www.linklikeaudio.com
Email: support@linklikeaudio.com